

# 使用說明書

## User Manual

BPH-K10



*Enjoy it.*

# 目錄

1.緊急處理方法&警告 -----	1	7.面板說明 -----	5
2.聲明 -----	1	8.操作方式 -----	5
3.注意事項 -----	2	9.焗盅使用說明 -----	6
4.產品特點 -----	4	10.清潔注意事項 -----	7
5.產品規格 -----	4	11.限用物質含有情況標示 ---	8
6.產品各部位名稱 -----	4		

## 緊急處理方法&警告


- ◎當發生異常或有燒焦味時，應立即拔除電源插頭，並與本公司服務專線連絡或就近經銷商洽詢，若在異常狀態下繼續使用易發生火災之危險。
- ◎為了避免火災或電擊的危險，請勿讓本機暴露於雨中或濕氣中。
- ◎電源線請確實插牢於電源插座內，以免因未插牢而引起插頭產生高熱，而造成意外。
- ◎電源線若損壞時，請速與本公司服務專線聯絡或就近經銷商洽詢。
- ◎請勿擅自拆下任何蓋子、內部裝置或調校內部機器裝置，請交由本公司專業人員進行維修。

## 聲明

- ◎本手冊經仔細檢查及校對，但仍不排除文字拼寫及技術錯誤之可能，若因錯誤導致與實機不符時，以實機為準，此種錯誤或疏漏不能當呈堂的依據，其將於新版予以修正。
- ◎本手冊之全部內容，本公司享有隨時修改之權力，且不另行通知。

## ⚠ 危險

- 壺身僅能搭配專用底座使用

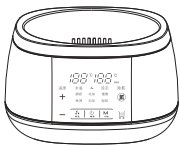

- 注水請勿超過最高水位線以免煮沸水外溢



- 加熱過程中，請勿觸摸壺身和底座，以免燙傷。




- 產品包裝PE袋請勿讓兒童玩耍，以免窒息的危害。



- 壺蓋不可用於提起水壺以免壺身掉落或燙傷。



- 請勿將產品放置在嬰幼兒可接觸到的場所。

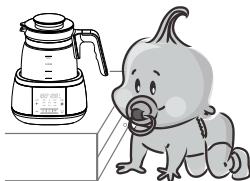

- 如果電源線損壞，為了避免危險，必須由製造商的專業人員來維修更換。
- 不得使用微波爐等加熱設備對產品進行加熱。產品包裝PE袋請勿讓兒童玩耍，以免窒息的危害。

### ⚠ 警告

- 請勿將產品底座和壺身浸入水中清洗，以免造成產品損壞。



- 壺內無水時，請勿乾燒，請關閉電源。



### ⚠ 注意

- 1.本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者（包含孩童）使用，除非在對其負有安全責任的人員之監護或指導下安全使用。
- 2.孩童應受監護，以確保孩童不嬉玩電器。
- 3.在將產品連接電源之前，務必檢查產品所標電壓和供電電壓是否相符。
- 4.產品的電源插頭必須插入有接地的插座，且務必確保已有穩固插入。
- 5.不要讓電源線，插頭接觸到高溫表面及銳利的邊角，如有插頭，電源線或產品本身受損請勿使用本產品。
- 6.清潔前請斷開電源並等其冷卻後再進行操作。
- 7.不得用於存放碳酸飲料。
- 8.本產品符合國家安規安全標準，如有殘留材質氣味屬正常現象，第一次使用前請先依照正確清洗方式清潔產品，即可有效降低或消除殘留氣味。
- 9.長期不使用時，請拔掉電源，及時清潔並晾乾後存放。
- 10.該產品僅供室內使用。

## 產品特點

附燉盅、甜品、鹹粥輕鬆燉煮

高硼矽玻璃、耐高溫、抗爆性能更佳

6種智慧功能可選，操作方便，滿足不同需求

LED雙溫智能顯示屏幕，清晰明瞭

單鍵除氯，健康飲水更安心

37~95度精準控溫，滿足各種食譜烹調需求

快速循環降溫風扇，獨家專利


三重安全保護功能-防乾燒、高溫保險絲、溫控保護

24小時智能恆溫(也可取消)

## 產品規格

- 額定電壓:110V~60Hz
- 總額定消耗電功率:700W
- 容量:1300mL

## 產品各部位名稱

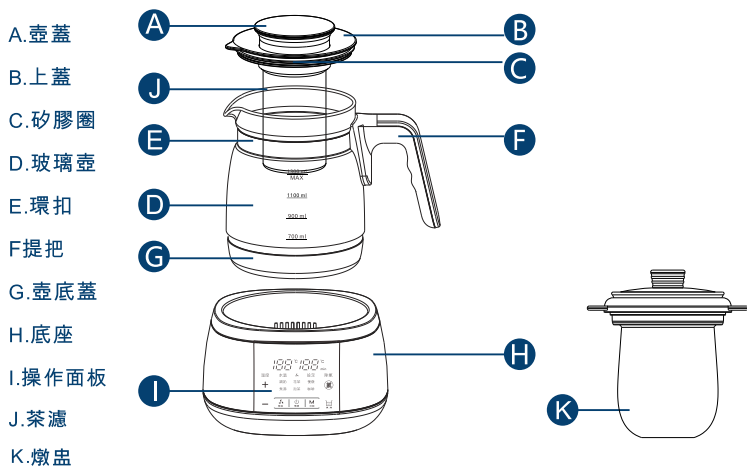

包裝清單:底座x1、快煮壺x1、燉盅x1、說明書(含保證書)x1、食譜x1

## 面板說明



啟動或關閉降溫風扇



電源

電源開關



功能

功能選擇：45°C調奶，55°C花茶，60°C慢燉，85°C咖啡，90°C泡茶，100°C煮沸。



除氯---將水煮沸後持續除氯約5分鐘



煮沸

煮沸---將水煮沸

十 溫度增加，最高溫度可設置到95°C

— 溫度減小，最低溫度可設置到37°C

注：

由於各地區大氣壓力的差異因素，沸點有可能低於或高於100°C。

本機設置的可調保溫溫度將低於沸點約5°C為上限；並以不低於當時使用環


境溫度為下限（最低不低於37°C）。

## 操作方式



- 使用前,先將壺內清洗乾淨,以確保乾淨衛生。
- 首次使用時,請先將水煮沸後倒掉,再正常使用。
- 加水量請勿超過壺身最大刻度範圍,注水太滿,煮沸時可能會導致沸水噴出。
- 溫馨提示:建議使用者根據不同品牌奶粉再選擇符合的調奶溫度。

# 操作方式



## 煮沸

- 接通電源，按“ ”鍵，產品預設為45°C調奶功能，再按沸騰鍵，將水煮沸。
- 煮沸完成後，降溫至設定的溫度，持續保溫24小時。


## 除氯

- 接通電源，按“ ”鍵，產品預設為45°C調奶功能，再按“ ”鍵選擇除氯功能，將水煮沸後持續除氯約5分鐘。
- 除氯完成後降溫至設定的溫度，持續保溫24小時。（注：此功能為了有效減少自來水中的氯的含量，若使用純淨水無需除氯）


## 調奶

- 接通電源，按“ ”鍵，按下功能選擇調奶，產品預設為45°C調奶功能。若要調整設定溫度，可按“ ”鍵來調整，當前水溫達到設定溫度，持續保溫24小時。（請使用飲用水，若用生水請先煮沸後再使用）



## 花茶

- 待機狀態下，按“模式切換”鍵選擇“花茶”，花茶燈亮後自動進入工作狀態，花茶默認設定時間為50分鐘，若要調整設定時間，可按“ ”鍵來調整，時間可調（30-180分鐘）。全功率加熱至沸騰，沸騰後開始倒計時，花茶功率為120W，倒計時完成後返回溫度55°C進行保溫24小時。

## 慢燉



- 待機狀態下，按“模式切換”鍵選擇“慢燉”，慢燉燈亮後會自動進入工作狀態，慢燉默認設定時間為60分鐘，若要調整設定時間，可按“ ”鍵來進行調整，時間可調（30-180分鐘）。全功率加熱至沸騰，沸騰後開始倒計時，慢燉功率為120W，倒計時完成後返回溫度60°C進行保溫24小時。

## 咖啡


- 接通電源，按“ ”鍵，產品預設為45°C調奶功能，再按功能選擇鍵，選擇咖啡功能，預設設定溫度為85°C，若要調整設定溫度，可按“ ”鍵來調整，當前水溫達到設定溫度，持續保溫3小時。（請使用飲用水，若用生水請先煮沸後再使用）

## 操作方式

### 泡茶

- 接通電源，按“ ”鍵，產品預設為45°C調奶功能，再按功能選擇鍵，選擇泡茶功能，預設設定溫度為90°C，若要調整設定溫度，可按“ ”鍵來調整，當前水溫達到設定溫度，持續保溫3小時。（請使用飲用水，若用生水請先煮沸後再使用）

### 風冷鍵

- 當前溫度高於設定溫度時，按“ ”鍵，風扇啟動，待水溫降到設定溫度時，風扇停止工作。（風冷預設功能：如選擇煮沸或者除氯功能時，按下風冷鍵，風冷燈亮起，但風扇不轉，待完成煮沸或除氯後，風扇自動啟動，風冷燈閃爍，降至設定溫度後，風扇停止，風冷燈滅。）

### ※提壺記憶功能

智慧識別提壺記憶，在工作過程中，當壺身離開底座，重新放壺後可繼續自動執行之前已經開始的程式，無需另行操作。

\*以上各種設定，保溫時間3或24小時。如無保溫要求時，請斷開電源。

以上功能，在工作過程中，如觸摸“ ”鍵，則停止工作，進入待機狀態。


## 燉盅使用說明



1. 將食材放入燉盅內，加入適量的水



2. 在玻璃壺中加入適量的水，並將燉盅放入壺內

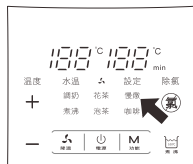

3. 將玻璃壺放在在底座上，並選擇 慢燉模式

※放入燉盅後的湖中水量請勿超過最高水位線

## 清潔注意事項

- 清潔前請斷開電源並等其冷卻到常溫。
- 電源底座和壺身請勿浸入任何液體中清洗,只能用乾淨抹布擦拭,禁止使用腐蝕性洗滌劑、帶化學研磨粉狀的清洗劑硬的金屬絲網刷進行清洗。
- 因自來水的水質不同,使用一段時間後,壺底表面產生水垢屬於正常現象,可用水垢清潔劑或醋酸浸泡,讓水垢剝離後再清洗。

## 限用物質含有情況標示

揭露網址:

<http://59.124.114.85/download/ROHS/A0019.pdf>

## Table of Contents

1. Emergency Handling and Warning..	1	6. Name of Parts.....	4
2. Disclaimer .....	1	7. Panel Description.....	5
3. Safety Precautions.....	2	8. Operating Instructions.....	5
4. Product Features .....	4	9. Notes for Cleaning.....	7
5. Product Specifications.....	4	10. Restricted substances I nclude con- dition labels.....	8

## Emergency Handling and Warning

- ⊙ When abnormalities or burning scent occurs, unplug the power plug immediately and contact the service hotline of our company or a nearby dealer. Continuous use under abnormal conditions may easily result in fire dangers.
- ⊙ In order to prevent the danger of fire or electric shocks, do not expose this machine to rain or humidity.
- ⊙ Make sure that the power cable is plugged in the power socket properly in order to prevent heat from being generated at the plug due to being loosely plugged and causing accidents.
- ⊙ If the power cable is damaged, please contact the service hotline of our company or a nearby dealer as soon as possible.
- ⊙ Do not remove any covers, internal devices or adjust internal mechanical devices on your own; have a professional from our company perform the repairs.

## Disclaimer


- ⊙ This manual has been checked and proofread carefully, but there are still possibilities of typos and technical errors; if there are contents that do not match the actual machine due to errors, please subject to the actual machine. These types of errors or omissions cannot be used as proof in court, and will be corrected in new revisions.
- ⊙ Our company reserves the right to modify all contents in this manual at any time without further notice.

# Safety Precautions



## Danger

- The kettle body can only be used with the dedicated base.

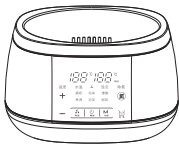

- Do not fill the water above the maximum water level line in order to prevent spilling when the water boils.



- Do not touch the kettle body and base during the heating process in order to prevent scalding.



- Do not let children play with the product package PE bag in order to avoid the danger of suffocation.



- Do not let children play with the product package PE bag in order to avoid the danger of suffocation.



- Do not let children play with the product package PE bag in order to avoid the danger of suffocation.



- If the power cable is damaged, in order to prevent danger, please have professionals from the manufacturer to repair or replace the cable.
  - Do not heat this product using microwave ovens or other heating devices.
- Do not let children play with the product package PE bag in order to avoid the danger of suffocation.

# Safety Precautions



## Warning

- In order to avoid causing damages to this product, do not clean the product base and kettle body by immersing them in water.



- Do not heat the kettle when there is no water inside; please turn off the power.



## Notes

1. This electrical appliance is not intended for users with physical, perceptual, intellectual deficiencies or lack of experience or knowledge (including children) unless safely used under the surveillance or guidance of guardians responsible for their safety.
2. Children should be looked after in order to prevent them from playing with electrical appliances.
3. Before connecting the power of this product, please check whether or not the power supply voltage is consistent with the voltage labelled on the power.
4. The power plug of the product must be inserted to a grounded outlet and it must be confirmed that it is inserted properly.
5. Do not let the power cable and power plug come in contact with high temperature surfaces and sharp edges. Do not use this product if the power plug, power cable or the product itself was damaged.
6. Disconnect the power and wait for the product to cool down before performing cleaning operations.
7. Do not use this product to store carbonated drinks.
8. This product complies with the country's safety regulations and safety standards; it is normal if there are residual material odors. Please clean the product by following the correct cleaning methods before using this product for the first time in order to effectively reduce or eliminate residual odors.
9. If the product is not used for extended periods of time, please unplug the power, clean the product immediately, let it dry and then store the product.
10. This product is for indoor use only.

## Product Features


1. It is easy to stew dessert and nutritious porridge with stewing cup.
2. High borosilicate glass, with better high temperature resistance and explosion resistance.
3. 6 intelligent functions are optional, easy to operate and meet the different needs of family members.
4. Led dual digital display is clearer and intelligent technology touch screen.
5. Single key dechlorination, healthy drinking water is more reassuring.
6. 37-95 degrees accurate temperature control, to meet the cooking needs of various recipes.
7. Fast circulating air cooling, exclusive patent.
8. Triple safety protection - dry burn protection, temperature control protection, high temperature fuse protection.
9. 24-hour intelligent constant temperature.

## Product Specifications

- Rated voltage: 110V~60Hz
- Rated power: 700W
- Capacity: 1300mL

## Name of Parts

- A. Kettle cover
- B. Top cover
- C. Silicon ring
- D. Glass kettle
- E. Buckle
- F. Handle
- G. Kettle bottom cover
- H. Base
- I. Operation panel
- J. Tea filter
- K. stew pot x1

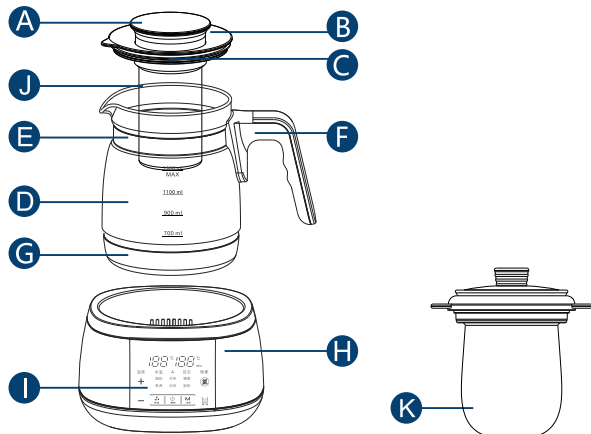

Package list: Base x1, Quick-boil kettle x1, stew pot x1, recipe x1

Accessories: Instructions manual (includes warranty card) x1, recipe x1

## Panel Description



Turn on or turn off the cooling fan function



Power switch



Function selection: 45°C milk blending, 55°C scented tea, 60°C simmer, 85°C coffee, 90°C tea-making.



De-chlorination---continues to dechlorinate for 5 minutes after the water boils



Boil---boils the water



increases temperature; the temperature can be set to a maximum of 95°C



decreases temperature; the temperature can be set to a minimum of 37°C

Note:

Due to the different atmospheric pressure in different regions, the boiling point may be lower or higher than 100°C.

The adjustable heat insulation temperature set by this machine uses approximately 5°C lower than the boiling point as the upper limit; and uses a temperature not lower than the current usage environment temperature as the lower limit (the minimum can be no less than 37°C).

## Operating Instructions

- Clean the inside of the kettle first before use in order to ensure its cleanness and sanitation.
- When using this product for the first time, please first let the water boil, empty the boiled water and then use it normally.
- When adding water to the kettle, do not exceed the maximum scale range on the kettle body; if the water is too full, the boiled water may spill out when boiling.
- Gentle reminder: It is recommended for users to choose the appropriate milk blending temperature based on the different brands of milk powder.

## Boil

- Connect the power and press the key "⏻". The default setting of the product is 45°C milk-blending function; press the boil key again to boil the water.
- Once boiling is complete, the temperature will be cooled to the temperature set and maintain that temperature for 24 hours.

### De-chlorination

- Connect the power and press the key "⏻". The default setting of the product is 45°C milk-blending function; then press the key "☼" to select the dechlorination function to continue to dechlorinate for 5 minutes after the water is boiled.
- Once de-chlorination is complete, the temperature will be cooled to the temperature set and maintain that temperature for 24 hours. (Note: This function is to effectively reduce the chlorine content in tap water; de-chlorination is not needed if pure water was used)

## Milk-blending

- Connect the power and press the key "⏻"; press the function and select milk-blending. The default setting of the product is 45°C milk-blending function. To adjust the set temperature, press the key "+ -" to make adjustments. When the current water temperature reaches the temperature set, maintain that temperature for 24 hours. (Please use drinking water; if un-boiled water was used, please boil it first and then use)

## Scented tea


- Under the standby mode, press the "Mode Switch" key and select "Scented tea"; after the scented tea light turns on, it will automatically start operating. The default time for scented tea is set to 50 minutes; to adjust the set time, press the key "+ -" to make adjustments. The time can be adjusted between (30-180 minutes).

Heat with full power until boiling and countdown will begin after boiling; the power for scented tea is 120W. Once the countdown is completed, it will return to the temperature 55°C and maintain that temperature for 24 hours.


## Simmer

- Under the standby mode, press the "Mode Switch" key and select "Simmer"; after the simmer light turns on, it will automatically start operating. The default time for simmer is set to 60 minutes; to adjust the set time, press the key "+ —" to make adjustments. The time can be adjusted between (30-180 minutes). Heat with full power until boiling and the countdown will begin after boiling; the power for simmer is 120W. Once the countdown is completed, it will return to the temperature 60°C and maintain that temperature for 24 hours.


## Coffee

- Connect the power and press the key "", the default setting of the product is 45°C milk-blending function. Press the function selection key again and select the coffee function; the default temperature is set to 85°C, to adjust the set temperature, press the key "+ —" to make adjustments. When the current water temperature reaches the temperature set, it will maintain that temperature for 3 hours. (Please use drinking water; if unboiled water was used, please boil it first and then use)

## Tea-making

- Connect the power and press the key "", the default setting of the product is 45°C milk-blending function. Press the function selection key again and select the tea-making function; the default temperature is set to 90°C, to adjust the set temperature, press the key "+ —" to make adjustments. When the current water temperature reaches the temperature set, it will maintain that temperature for 3 hours. (Please use drinking water; if unboiled water was used, please boil it first and then use)

## Air cooling button

- When the current temperature is higher than the temperature set, press the key "" and the fan will be activated. Once the water temperature is reduced to the temperature set, the fan will stop operating. (Air cooling default function: If the boil or de-chlorination function is selected, press the air cooling key. The air


## Operating Instructions

cooling light will turn on but the fan will not rotate. Once boiling or de-chlorination is complete, the fan will start automatically and the air cooling light will flash; when the temperature will drop to the temperatures set, the fan will stop and the air cooling light will go off.)

### ✕ Kettle lifting memory function

Smart identification kettle lifting memory. During the operation process, when the kettle body leaves the base and then the kettle is placed on the base again, it can automatically continue executing the program that had previously been started without the need for additional operations.

\*The heat insulation time for the various settings above is 3 or 24 hours. If there is no need for heat insulation, please disconnect the power.

For the functions above, during the operating process, if the key "  " was pressed, operations will stop and it will enter the standby mode.

## Notes for Cleaning

- Please disconnect the power and wait for the product to cool down to normal temperature before cleaning.
- Do not clean the power base and kettle body by immersing them in any liquids; they can only be wiped using clean cloths. Cleaning with corrosive detergents, detergents with chemical abrasive powders or hard metal wire brushes are prohibited.
- Since the water qualities of tap waters are different, it is normal for scales to form on the surface of the kettle body after using for a period of time. The kettle can be soaked with scale detergents or acetic acid for the scale to peel off, and clean it.

## Restricted substances include condition labels

Exposure URL:

<http://59.124.114.85/download/ROHS/A0019.pdf>





非常感謝您：

承蒙惠購本產品，本公司除表達最高謝意外，並將本著一貫的服務精神，隨時為您提供最佳服務，在您使用前務請詳閱本說明書，並依正確方法使用，閱讀完畢後請妥為保管，以備日後使用參考。

## 商品保證書

機型：BPH-K10

購買日期： 年 月 日

顧客	姓名	電話：
	地址	
經銷商		

- 一. 上列保證書應確實填寫，並蓋有經銷商店章始為有效。
- 二. 免費服務年限為一年，自購買日起一年內，在正常使用下，如發生故障，則免費維修，但人為或天災地變或蟲害，不在此限。(如需服務換修零件，則按本公司服務規定，收取維修費)。
- 三. 收費服務年限為兩年，收費服務兩年內，如需維修則按本公司服務規定，收取維修費。
- 四. 免費再延長6個月保固：請即刻上本公司網站：<http://wonder.tw> 登錄購買的產品。  
網路登錄產品註冊【需先加入旺德會員】，註冊成功該產品既享有延長保固6個月時間。  
本公司網站另有多項優惠與服務，敬請多加利用。
- 五. 電池、充電電池、天線、唱針、磁頭、雷射頭、耳機、熱感頭、遙控器、信號線、燈泡、隨機附贈之軟體及其他配件、附件…等屬自然耗材不在保證範圍內。
- 六. 本保證書遺失恕不補發，但如需服務，則依出廠日期，計算保證年度。
- 七. 本商品無外修服務，如有另行約定則外出檢修費，依本公司規定收取；若發生故障請送回原購買經銷商或親洽本公司所屬營業所。
- 八. 本商品維修範圍僅於“台、澎、金、馬”(需付擔一趟郵資)，其餘地區請自付來回郵資。
- 九. MP3、音響…等產品送修時，內存的資料(數位、類比)有可能流失，建議送修前請先行備份，若有資料遺失之情形，本公司將不負任何賠償責任，郵寄維修視同同意本條款。
- 十. 本商品使用於營利商業用時，其保證期限按保證書所載期限減半保固。

宣告：

說明書業經仔細檢查及檢對，但仍不排除文字拼寫及技術錯誤之可能，此種錯誤或疏漏將於新版予以修正。本手冊之全部內容，本公司享有隨時修改之權利，且不另行通知。

### 消費者專線及售後服務據點

台北 (02)8990-4440 新北市五股區五工三路116巷6號  
台中 (04)2473-8199 台中市南屯區東興西街 76 號  
高雄 (07)371-4688 高雄市仁武區仁雄路 96 號

委製/進口商

**旺德電通股份有限公司**

新北市五股區五工三路116巷6號  
服務專線：(02)8990-4440  
<http://wonder.tw>  
E-mail:service1@wonder.tw