 


BLAUPUNKT

BLAUPUNKT
Brand
established
1924
GERMANY

9-BAND
PARAMETRIC EQUALIZER
EQ 900

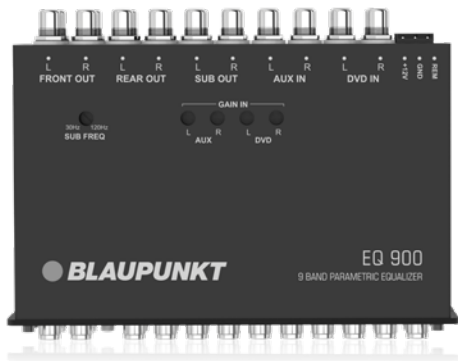

Enjoy it.

Operating and Installation Instructions

INTRODUCTION

Proper system planning is vital in order to maximize the device's performance and road safety. Plan your installation carefully to avoid compromising performance reliability of the system. Consult an authorized Blaupunkt dealer for installation or reparation. Read the manual carefully before operating the device for the first time.

Safety Notes

Ensure to follow below safety notes during installation and wiring connection: -

- Disconnect the negative terminal of the battery. Refer to the safety notes of the vehicle manufacturer.
- Ensure positions of the holes are nowhere near the vehicle component to avoid any damage during drilling.
- Ensure cross section of the cable is no less than 0.5mm² if the positive and negative cables are too long.
- Incorrect installation may result in malfunction of the device or the car sound system.

Installation and Connection Instructions

- Select a dry and well-ventilated location to install the device.
- The device must not be installed in overly exposed location such on the rear shelf, rear seat etc.
- The installation location must be suitable for screw holes and have stable ground support.

Integrated Fuse

The integrated fuse in the device protects the output voltage and the entire electrical system in case of malfunction. Do not replace damaged fuse with higher current.

Disclaimer

In no event shall Blaupunkt be liable for any direct, indirect, punitive, incidental, or special consequential damages to property or life and whatsoever arising out of or connected with the use or misuse of our products.

USA & CANADA: This product is not intended for sale in the United States and Canada. If purchased in the U.S. or Canada, this product is purchased on as-is basis. No warranty, whether expressed or implied is provided in the U.S. or Canada.

General Safety Notes

Observe the following to protect yourself against injuries :

- The supply voltage requirement is 12V DC with grounded negative connection. Unauthorised dismantling or modifying may void the warranty of the device. Blaupunkt is not liable for any loss or damaged caused or resulting from unauthorized reparation or modification to the device. Refer to a Blaupunkt specialist in case of any installation or reparation required.
- The device's core components may be damaged when the car is driven on bumpy roads for a prolonged period of time or if it is used to play non-standard volume level.
- Please do not operate the car radio under extreme temperature conditions (extremely high temperature or extremely low temperature); ensure the temperature within the car ranges from -10°C to 85°C (Storage temperature : 5°C to 35°C) before connecting to the power supply.
- For abnormalities, please refer to TROUBLE-SHOOTING. Consult a specialist if the problem persist.
- Solvents, cleaning and scouring agents as well as dashboard spray and plastic care products may contain materials which can damage the surface and screen of the device. Use only a dry or slightly moistened cloth to clean the device.

Recycling and Disposal

 


Do not dispose of your old unit in the household trash!


Use the return and collection systems available to dispose of the old device.

This manual may be updated from time to time without any notice. Visit www.blaupunkt.com for more info.

FUNCTIONS CONTROLLING DIAGRAM

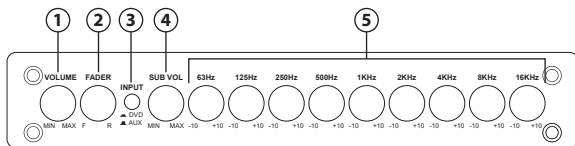


 1. Volume Control (MIN~MAX)
2. Fader Control (F/ R)
3. Input (DVD/ AUX)
4. Subwoofer Volume Control (MIN~MAX)
5. Parametric Equalization Control : Individually adjustable frequency response for 63Hz, 125Hz, 250Hz, 500Hz, 1kHz, 2kHz, 4kHz, 8kHz & 16kHz

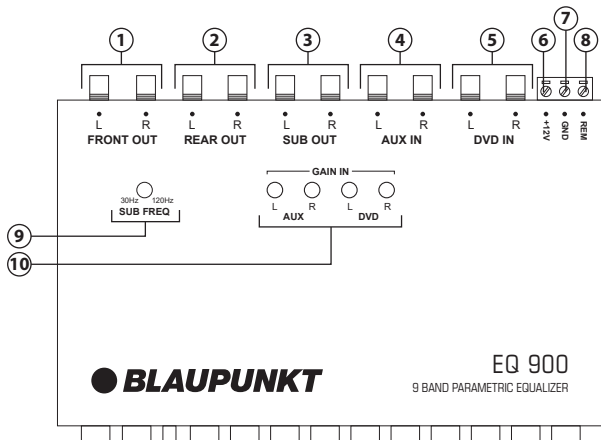

- | | |
|--------------|--------------------|
| 1. FRONT OUT | 6. +12V Connection |
| 2. REAR OUT | 7. GND |
| 3. SUB OUT | 8. REM Connection |
| 4. AUX IN | 9. Sub Frequency |
| 5. DVD IN | 10. Gain Input |

 SPECIFICATION

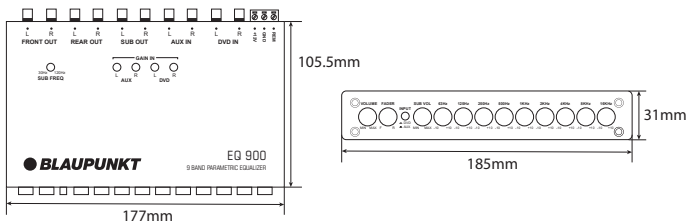

- Power Supply : 11-15V DC Neg. Ground
- Max. Output Voltage : 7V
- Pre Graphic Frequency : 63Hz, 125Hz, 250Hz, 500Hz, 1KHz, 2KHz, 4KHz, 8KHz, 16KHz
- Equalization Range : ± 10 dB
- Subwoofer Frequency : 30-120Hz
- Input Impedance : 20K Ohms
- S/N Ratio : 90dB
- Total Harmonic Distortion : 0.05%
- Channel Separation : 72dB
- Frequency Response : 10Hz-50KHz (-3dB)

 
Accessories



Tapping Screws (3x10mm) x4




Machine Screws (3x6mm) x4




Mounting Brackets x2

 WIRING DIAGRAM

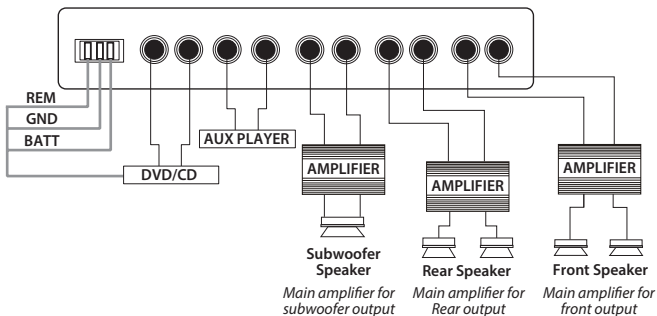

WIRING DIAGRAM

 Option 1

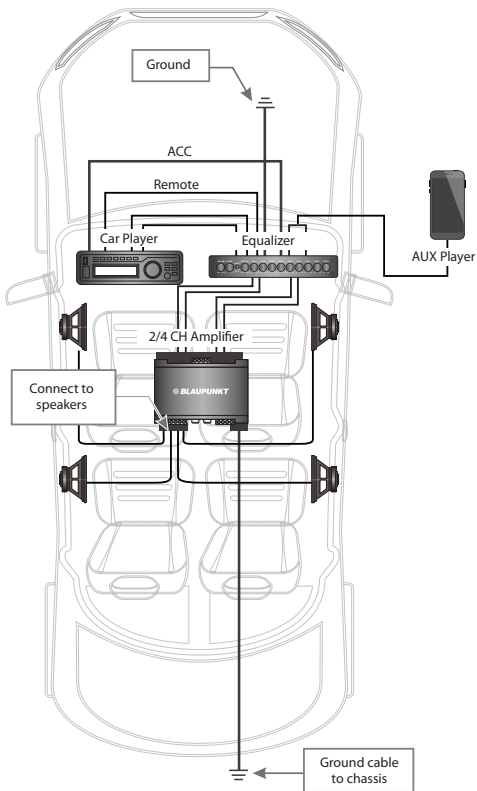


WARNING

Do not connect negative charge of the battery to the positive charge before installation.

WIRING DIAGRAM

 
Option 2

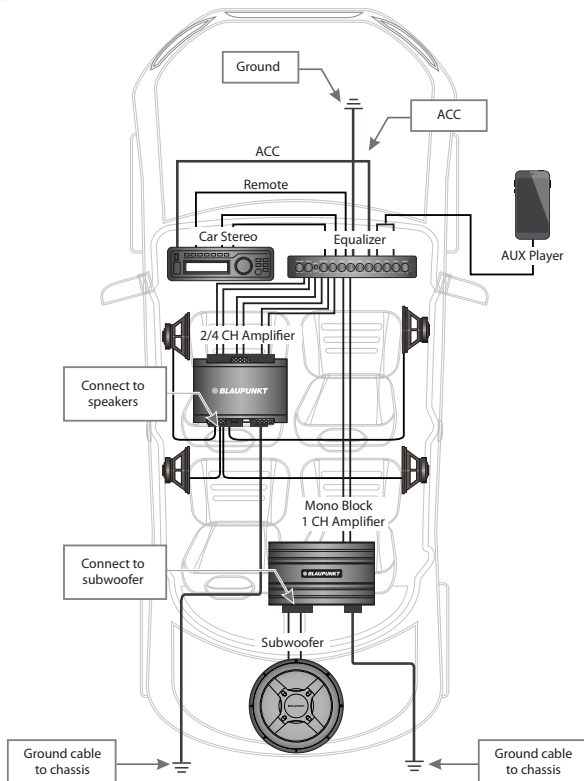

⚠ WARNING

Do not connect negative charge of the battery to the positive charge before installation.

 INSTALLATION

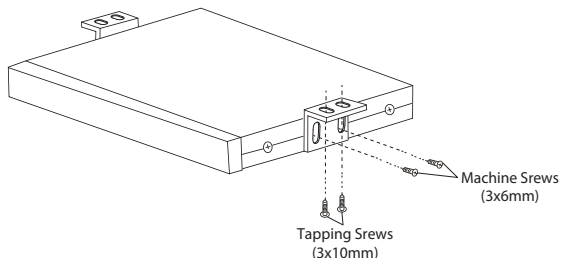

1. Select an ideal installation location to mount the product unit under the dashboard.
2. Mount the unit to the mounting bracket with 4pcs of 3x6mm machine screws.
3. Drill 4 holes with 2 - 2.5mm diameter (if necessary). Fix the mounting brackets under the dash or in the rear of the car with 4pcs of 3x10mm tapping screws. Be careful when drilling to avoid damaging existing wiring under the dashboard.

TROUBLESHOOTING

If any of the following problem occur, please resort to Troubleshooting for the possible solutions. Consult Blaupunkt authorized dealer if problem persist.

Problems	Possible Causes	Solutions
No audio output	Disconnected power wires.	Examine power wire and ground connections. Replace and repair accordingly.
	Disconnected speaker wires.	Examine speaker wires. Replace or repair accordingly.
	Remote wire failed to work.	Examine voltage output/connection and repair accordingly.
Equalizer effect cannot be obtained	The input and output connections are reversed.	Check the connection of input & output, ensure that the connection is correct.
Distorting Speakers	Equalizer is overdriven.	Adjust the equalization levels.
		Lower the volume of the source unit.
		Lower sub level.

